

Item Part # Description


1. 1702707 Ring Terminal - 6 Ga. 1/4" Stud
 2. 1704330 Rubber Insulating Boot
 3. Shur-Co® Wireless Receiver

4. 1700408 Hex Nut - 1/4"


5. 1700436 Lock Washer - 1/4" 6. 1702926 Cap Screw - 5/16" x 7/8"

6. 1702926 Cap Screw - 5/16" x 7 7. 1700428 Flat Washer - 5/16"

3. 1700419 Nylon Lock Nut - 5/16"

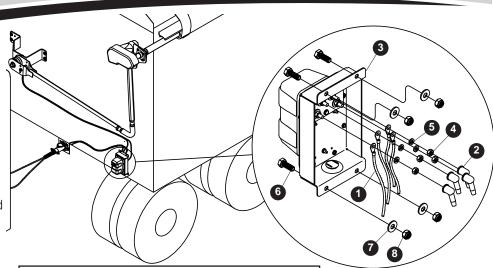

NOTE: Use dielectric grease (P/N 1704378) to prevent corrosion on terminals.

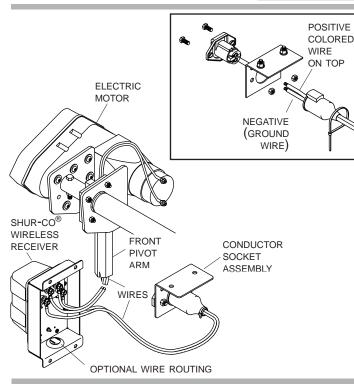

STEP 1: Identify 6-ga. wire running from electric motor. For the 3500 system, route wire through front pivot arm; for all other systems, route wire as desired. Insert end of this wire through rubber boots, then crimp 1/4" ring terminals onto wire ends. Remove nuts and lock washers from back of receiver. Place positive wire on upper orange post and negative wire on upper black post. Secure lock washers and hex nuts. Coat with dielectric grease and install rubber boots over ring terminals.

STEP 2: Run 6-ga. wire from battery/conductor socket to wireless receiver. Insert end of wire through rubber boots, then crimp 1/4" ring terminals onto wire ends. Place positive wire on lower orange post and negative wire on lower black post. Secure with lock washers and hex nuts. Coat with dielectric grease and install rubber boots over ring terminals.

NOTE: Cut wires to length and strip only enough wire insulation to install ring terminals. Insert bare wire into ring terminals and crimp securely.



Operation

A) Open tarp: Check motor direction by activating switch to "OPEN." If switch is running system backwards, change wire leads on motor to opposite connections.

B) Close trap: Push switch to "CLOSE" and hold. Observe trap and release switch when hopper door is fully closed.


C) Open trap: Push switch to "OPEN" and hold. Observe trap and release switch when hopper door is fully open.

NOTE: Release switch at end of cycle or modified-reset circuit breaker will trip. After breaker resets, switch will activate motor again. To reduce unnecessary strain on tarp components, release switch at end of each cycle.


NOTE: Pressure Wash. The receiver may be pressure washed, but keep nozzle at least 3' from system while spraying.


PO BOX 713 • 2309 SHUR-LOK STREET YANKTON, SOUTH DAKOTA 57078-0713 PH. 1-800-474-8756 • FAX 605-665-0501



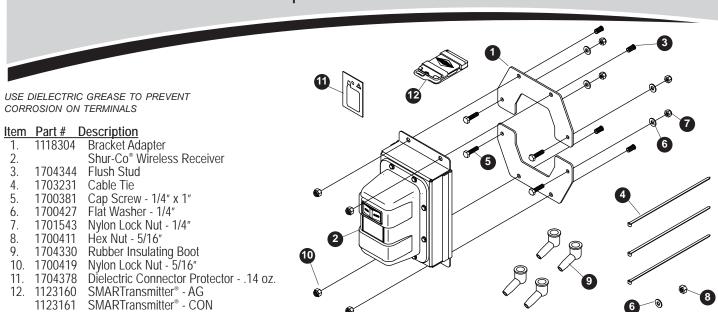


STEP 1: Insert flush studs through holes shown in bracket adapters. Slide 1/4" washer and 5/16" hex nut (not lock nut) over flush stud. Tighten nut onto each flush stud, tightening studs into bracket adapters until stud heads are nearly flush with adapters. Remove and discard washer and nut.

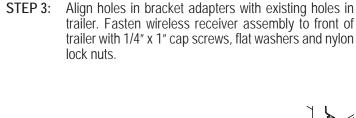

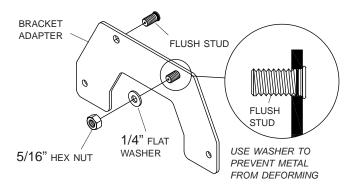

STEP 2: Fasten wireless receiver to bracket adapters with 5/16" nylon lock nuts.

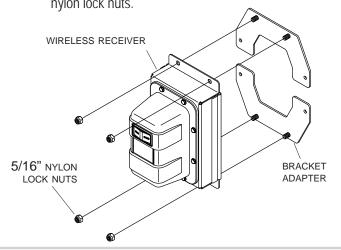

FRONT OF TRAILER

1/4" NYLON LOCK NUT

WIRELESS RECEIVER

1/4" × 1" CAP SCREW

1/4" FLAT
WASHER
EXISTING
HOLE IN
TRAILER

PO BOX 713 **2309** SHUR-LOK STREET YANKTON, SOUTH DAKOTA 57078-0713 PH. 1-800-474-8756 **FAX** 605-665-0501

