



**NOTE:** Follow directions carefully to ensure remote fits into cradle after adhering lanyard ring to remote. Recommended temperature during application is 70°F.


STEP 1: Clean back of remote with alcohol swab. If remote is excessively dirty, wash with soap and warm water before using alcohol wipe.

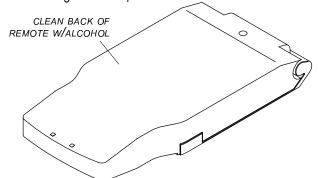


STEP 2: Remove backing from two-sided adhesive tape on lanyard ring and place lanyard ring into groove in remote cradle, tape side up.

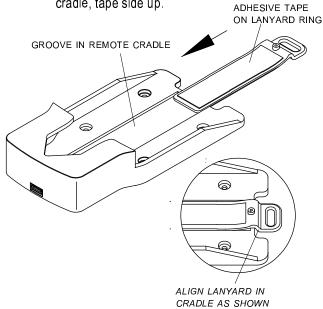

STEP 3: Hold remote at angle and slide remote into cradle, keeping lanyard ring in groove in cradle. Press cradle and remote together to lightly adhere remote to lanyard ring.

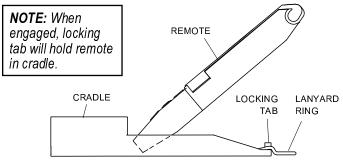


**NOTE:** To remove remote from cradle, pinch tab on lanyard ring into remote to disengage locking tab and pull remote out of cradle.

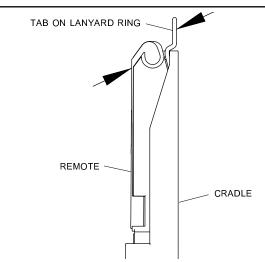

## **A** CAUTION


Lanyard must have safety clip that will release at no more than 5 lb. to prevent injury if lanyard or remote becomes caught.

 Continued...





STEP 4: Remove remote from cradle and make sure locking tab on lanyard is fitting into hole in remote, then press lanyard ring into remote to secure adhesion.

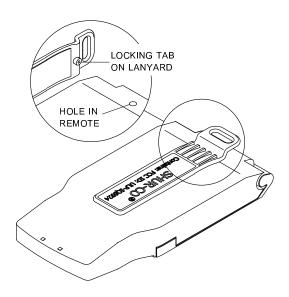


**NOTE:** Adhesive will not reach complete strength for a full 72 hours. Remote may be used while adhesive is curing, but please use caution until adhesive is fully cured.



SCAN HERE TO SEE FULL INSTRUCTIONAL VIDEO


## OPTIONAL COLD WEATHER INSTRUCTIONS

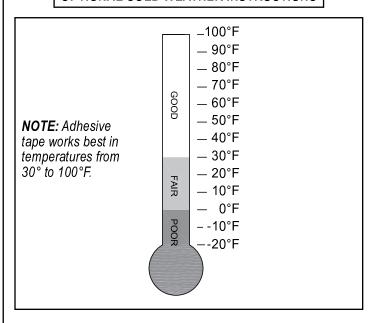

**NOTE:** If planning to use remote in excessively cold weather, it is recommended to adhere lanyard ring to remote using Super Glue<sup>®</sup>. See following steps below and Super Glue<sup>®</sup> manufacturer's instructions.

**STEP 1:** Remove adhesive tape from lanyard ring and clean with alcohol. Follow step 1 for standard application.

**STEP 2:** Apply Super Glue® to lanyard ring, placing glue only in area shown.

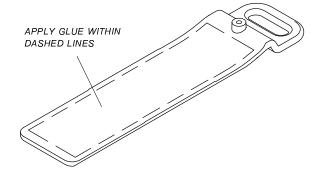

## **A** CAUTION

To prevent lanyard ring from adhering to cradle, apply Super Glue® only in area shown above. Do not apply glue excessively.

STEP 3: Place lanyard ring into groove in remote cradle as shown in step 2 for standard application.

**STEP 4:** Follow steps 3 and 4 for standard application.

SHURE