


Item	Part #	Description	Qty.
1.	1703845	Motor Reversing Solenoid - 12 Volt	1
2.	1703896	Solenoid Cover	1
3.	1704905	Flanged Cap Screw - #10 x 1"	2
4.	1808844	Nylon Lock Nut - #10	2
5.	1800430	Ring Terminal - 1/4" x 8 Ga.	4

STEP 1: Disconnect wires and remove existing solenoid from configuration. Replace with new 12 volt solenoid 1 as shown in wiring diagram.

STEP 2: Remove existing ring terminals from wires A, B, C and D. Leave existing ring terminal on wire E.

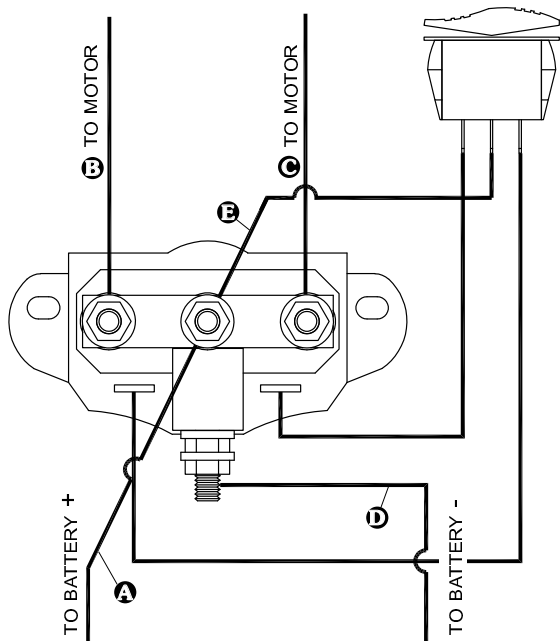

STEP 3: Install new ring terminals 5 on wires A, B, C and D.

STEP 4: Reconnect wires to 12 volt solenoid 1 as shown in wiring diagram.

