


**STEP 1:** Remove self-tapping screws from rear of Shur-Strap™.

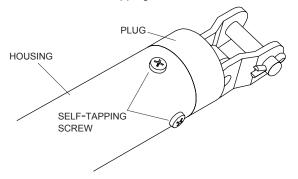


**STEP 2:** Remove spring assembly from housing.

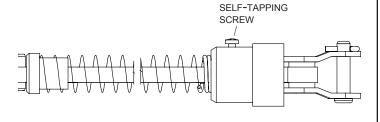


**STEP 3:** Remove spring pin from webbing loop at front of assembly.

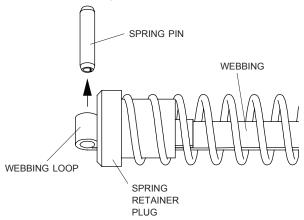


**STEP 4:** Pull webbing and connector link off spring.

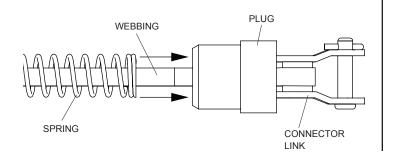


**STEP 5:** Remove plug from webbing and connector link.

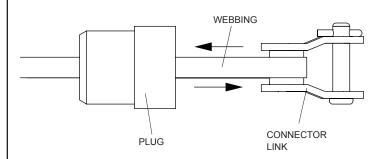


**STEP 6:** "Fish" new webbing through plug, spring and spring retainer plug.

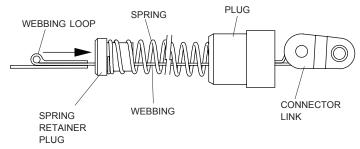

STEP 7: Insert spring pin through loop in webbing and cut off tail.

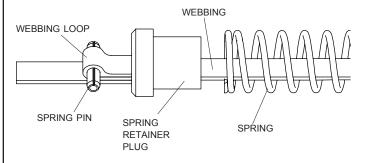

STEP 8: Re-install webbing and spring assembly into Shur-Strap™ housing. Secure with self-tapping screws.

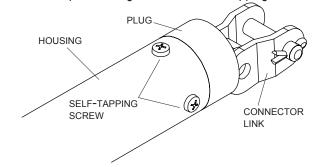

PO BOX 713 **2309** SHUR-LOK STREET YANKTON, SOUTH DAKOTA 57078-0713 PH. 1-800-474-8756 **FAX** 605-665-0501



SHUR-CO® HELP LINE CALL: 1-866-748-743 www.shurco.com