


## Installation Instructions - Extendable Drive Shaft Assembly

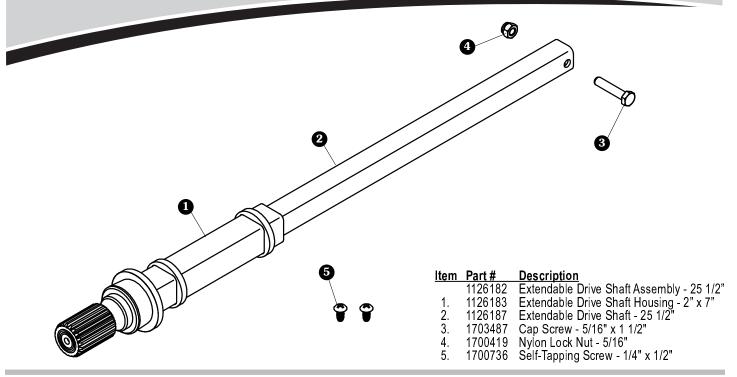


STEP 1: Insert extendable drive shaft assembly into end of roll tube, aligning notch in housing with screw in roll tube.

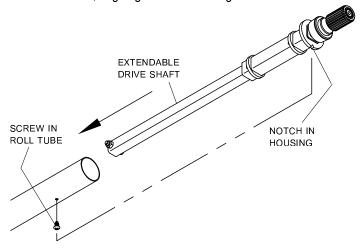

STEP 2: Hold spline straight and weld all around. Weld short beads and let cool, then fill weld between beads.

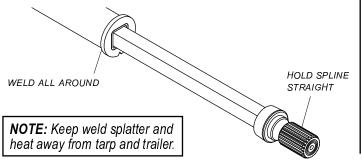

STEP 3: To fasten tarp to roll tube, remove existing screw and U-clamp at end of roll tube. Replace U-clamp and secure with supplied 1/4" x 1/2" self-tapping screw.

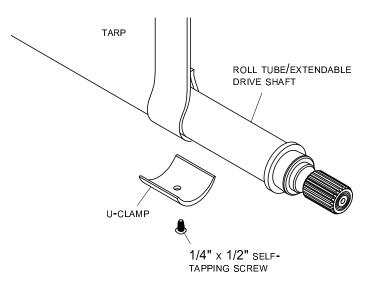

**NOTE:** Always store extendable drive shaft assembly with spline in collapsed position.

**NOTE:** To prevent rust, paint all exposed metal, such as weld seams and/or metal exposed by grinding or cutting, with corrosion-resistant paint.

PO BOX 713 • 2309 SHUR-LOK STREET YANKTON, SOUTH DAKOTA 57078-0713 PH. 1-800-474-8756 • FAX 605-665-0501

