

- ItemPart #Description1.1117972Fiberglass Ridgepole Connector2.1704098Spring Pin 1/4" x 1 1/4"3.1703594Fiberglass Ridgepole 7/8" x 20'
- STEP 1: Insert first fiberglass ridgepole section halfway into ridgepole connector. Use hole in connector as a guide to drill 1/4" hole through ridgepole section.
- **STEP 2:** Install spring pin through hole to secure ridgepole section to connector.
- **STEP 3:** Insert second fiberglass ridgepole section into opposite end of connector, butting end of second ridgepole against first ridgepole. Use hole in connector as a guide to drill 1/4" hole through ridgepole section.
- **STEP 4:** Install spring pin through second hole to secure ridgepole section to connector.

PO BOX 713 = 2309 SHUR-LOK STREET YANKTON, SOUTH DAKOTA 57078-0713 PH. 1-800-474-8756 = FAX 605-665-0501



SHUR-CO<sup>®</sup> HELP LINE CALL: 1-866-748-7435 www.shurco.com Installation Instructions - Fiberglass Ridgepole P/N 1119045 Rev. C POCKET IN TARP POCKET IN TARP

**STEP 1:** Cut ridgepole tube 2" shorter than tarp length. Grind rough edges smooth. Wrap ridgepole with tape for smoother cut.

RIDGEPOLE


**STEP 2:** Install rubber sleeves over ends of ridgepole.

PROTECTIVE CAP

**STEP 3:** Insert ridgepole into ridgepole tarp pocket. Center pole in tarp pocket and verify that ridgepole is 1" shorter than tarp on each end. Drill 3/16" hole through ridgepole pocket and fiberglass rod as shown.

## CAUTION

Do not puncture tarp. Install rivet through top of tarp pocket and into ridgepole. Place barrier between ridgepole and tarp to prevent puncturing tarp.

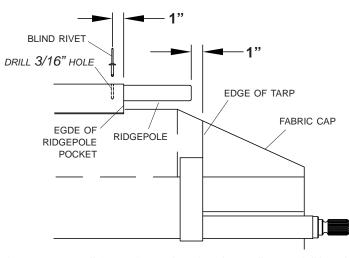

**STEP 4:** Install rivet 1" from edge of pocket. Pull tarp to full length and install second rivet 1" from opposite end of pole.



SHUR-CO® HELP LINE CALL: 1-866-748-7435 www.shurco.com