


⚠ WARNING

Disconnect power before installation. Failure to do so may result in serious injury, death, or equipment damage.

Refer to the owner's manual for additional safety procedures.

⚠ CAUTION


Keep hands and fingers clear of moving parts when installing door stops. Pinch points may cause injury.

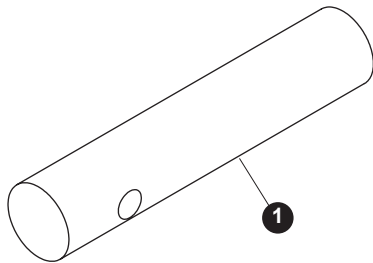

Item	Part #	Description
	1118339	Hopper Parts Kit - Cornhusker
1.	1118308	Adapter Shaft - Cornhusker


NOTICE: Refer to the **Preliminary Groundwork** section of the ProTrap® Owner's Manual (P/N 1121006) while completing adapter shaft installation.

STEP 1: After cutting square crank shaft to length, insert adapter shaft 2" into crank shaft, leaving drilled hole exposed as shown.

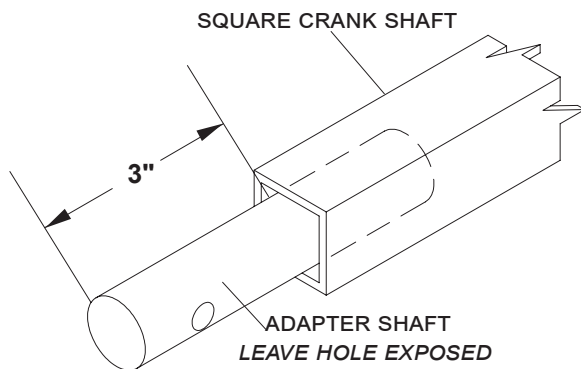


STEP 2: Continue following instructions in ProTrap owner's manual until intermediate bracket is fastened to hinge bracket.

STEP 3: Insert the end of adapter shaft into the lower coupling on the ProTrap motor assembly.

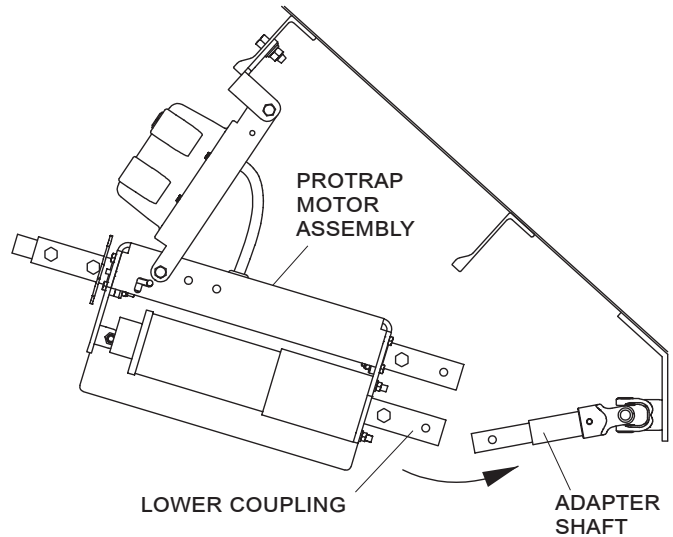


STEP 4: Align holes and insert the cap screw. Mark the weld location on the adapter shaft as shown below.

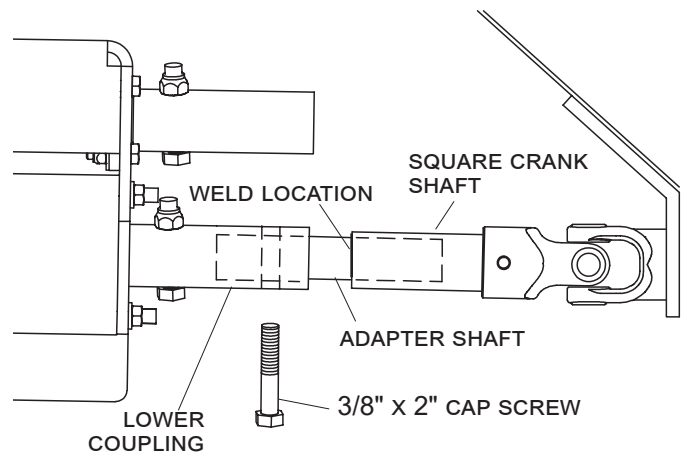

Continue instructions on reverse side.

STEP 5: Remove cap screw and disengage ProTrap motor assembly. Align mark on adapter shaft with end of crank shaft. Weld adapter shaft to crank shaft. Repeat Step 3.

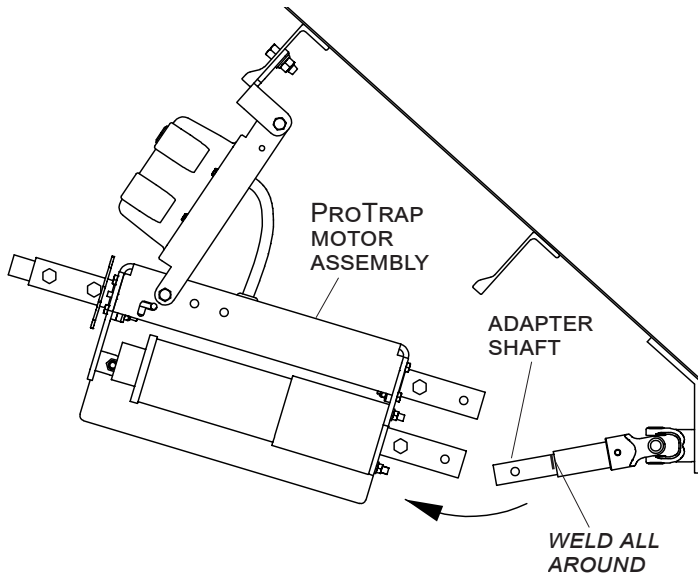

STEP 6: Align holes and fasten as shown in manual.

