


**Trailer: Install junction box and receiver between motor and conductor socket.**

*USE DIELECTRIC GREASE (PART #1704378) TO PREVENT CORROSION ON TERMINALS.*

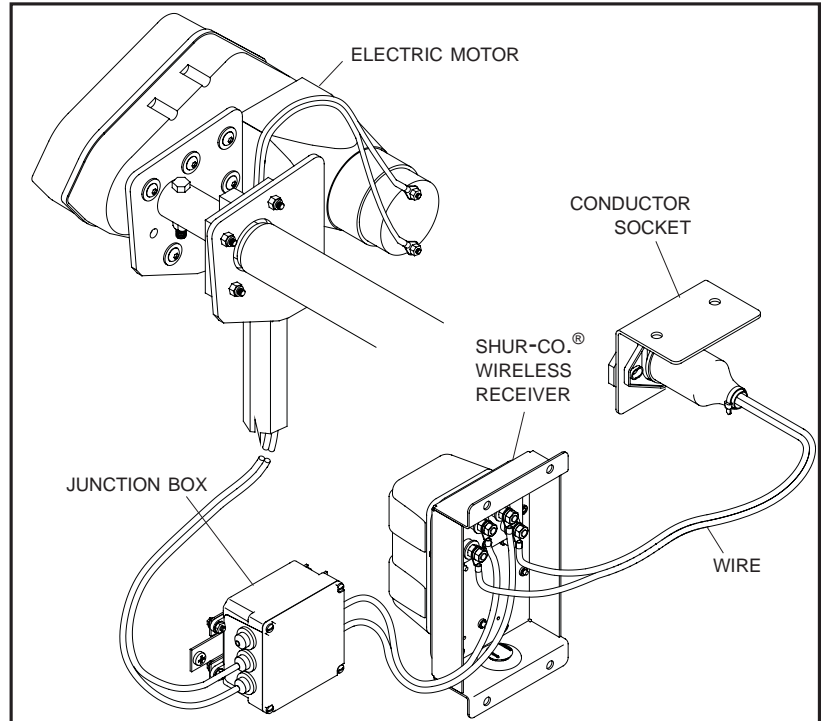

**Cab: Remove solenoid, rocker switch, and 14 ga. wire. Install junction box between battery and conductor plug.**

