Module Specifications

Supply Voltage	11 - 16 Volts DC
Number of Outputs	2
Output Type	Momentary
Output Connections	Output On: White output wire is connected to supply voltage. Output Off: White output wire is grounded.
Max Current	10 Amps Per Output
Control Switch on Module	Yes
Compatible Remote	SMART2™ Remote*
Automatic Safety Lockout *(For <u>Remote Button</u> Switches)*	None
Automatic Safety Lockout *(For <u>Control Box</u> Switches)*	Locked after 15-minutes of inactivity. While locked, outputs can not be turned on from control box. Press and hold both box switches for 1-second to unlock.

*External box switches are used to pair SMART2™ remote to control box. Internal access is not required.

Available Applications
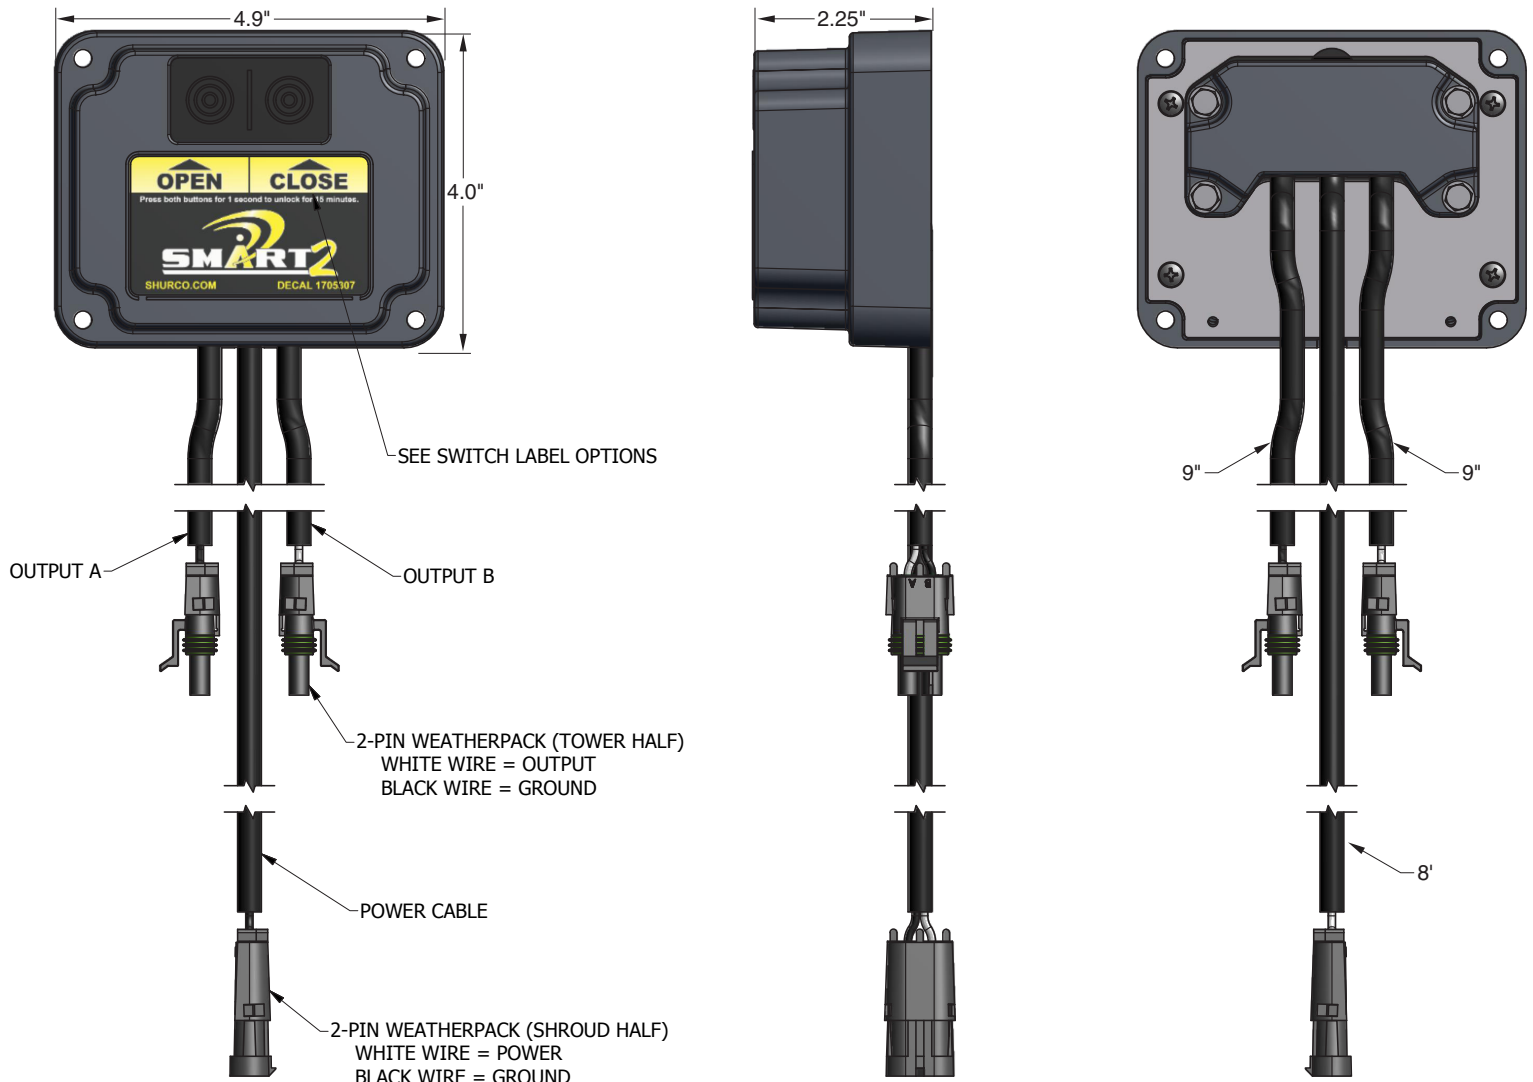
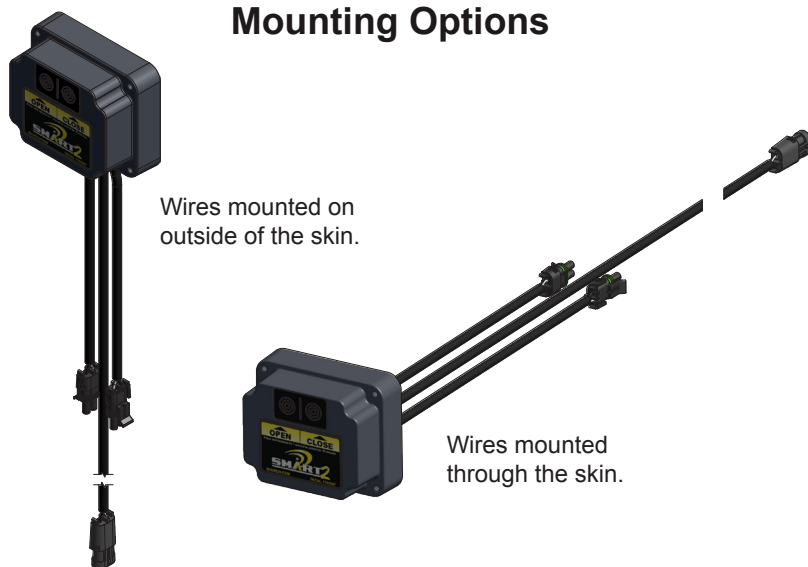|	
Conveyors	Stops/starts conveyors in applications where pre-existing controls require a momentary 12V "on" signal to start conveyor and a subsequent momentary 12V "off" signal to stop the conveyor.
Garage Door Control	One module can control one door and one circuit of lights, or two doors.
Proportional Valves	Allows for momentary control of proportional valves (for speed control, for example).
Auger Hydraulics	Allows for momentary control of electric-over-hydraulic augers positioning cylinders.

Control Module Options

Module P/N	Decal Button Description
1122546	UP/DOWN
1122547	LEFT/RIGHT
1122548	EXTEND/RETRACT
1122551	OPEN/CLOSE

Note: Switch labels on SMART2™ remote can be customized.

4.9"

4.0"

OPEN | CLOSE
Press both buttons for 1 second to unlock for 15 minutes.

SMART2
SHURCO.COM   DECAL 1705107

SEE SWITCH LABEL OPTIONS

2.25"

OUTPUT A

OUTPUT B

2-PIN WEATHERPACK (TOWER HALF)
WHITE WIRE = OUTPUT
BLACK WIRE = GROUND

POWER CABLE

2-PIN WEATHERPACK (SHROUD HALF)
WHITE WIRE = POWER
BLACK WIRE = GROUND

9"   9"

8'

Mounting Options

Wires mounted on
outside of the skin.

OPEN | CLOSE

SMART2

Wires mounted
through the skin.

OPEN | CLOSE

SMART2
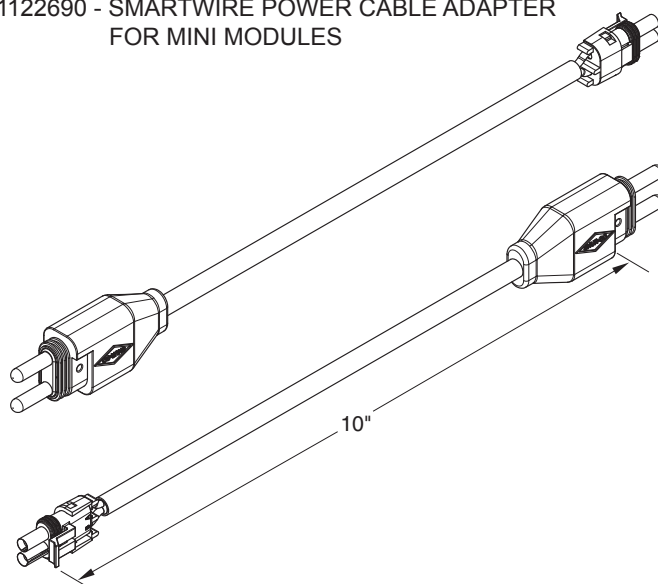
Not to Scale.

1122690 - SMARTWIRE POWER CABLE ADAPTER
              FOR MINI MODULES

10"

Not to Scale.

www.SHURCO.com · 1-800-474-8756