



How has attaching the Fixed Tube changed on Shur-Loks?


The attachment for the **Fixed Tube** on Shur-Lok® roll tarps has recently been improved with a screw rather than a rivet for faster installation. Depending on which method of attachment you receive, follow the instructions shown in the illustration at the left.

Our owners' manuals and installation instructions have also now been updated to reflect this change.


For additional information about Shur-Co® products, give us a call at **1.800.474.8756** Monday through Friday, from 8:00 a.m. to 5:00 p.m. Central Time. Our friendly and knowledgeable Customer Service Representatives will be happy to answer your questions. Or log on to our website at www.shurco.com.

STEP 4: Extend fixed tube 1/4" past tarp edge. Fasten tarp to fixed tube with screw or drill 1/4" hole and fasten with drive rivet.

SCREW VERSION

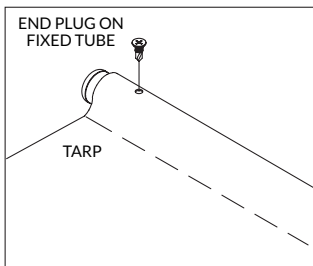


RIVET VERSION

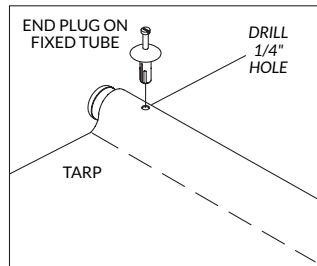

STEP 5: Stretch tarp along fixed tube and fasten with second screw or drive rivet.

SCREW VERSION

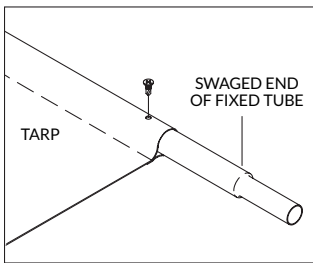

RIVET VERSION

